



CARE INSTRUCTIONS

Daily cleaning can be done by wiping the frame with a clean dry cloth. Should the surface need more attention this can be cleaned with water and a light detergent or soap applied with a damp cloth. Wipe after with a clean dry cloth. Avoid any abrasive materials.

TROUBLESHOOTING

If lamp does not light, turn off the power. Check the bulb for a broken filament. Replace bulb if necessary, then turn it on. If the lamp still does not light, please contact customer service at the local dealer. If the external flexible cable or cord of this lamp is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

TECHNICAL INFORMATION

Ø16 - E14, 30W Halogen, 4-5W LED
Turn power off when changing light bulb. Isolation class II.
This lamp is not approved for outdoor use or use in damp/wet rooms (IP20)



For enquiries contact GUBI A/S - CVR: 17940384
Klubiensvej 7-9. 2150 Nordhavn. Copenhagen, Denmark
T +45 69 15 60 60 – order@gubi.com
GUBI.COM


69-20-017-01 Assembly Instructions Howard Pendant - Ø16

GUBI

ASSEMBLY INSTRUCTIONS


for

Howard Pendant - Ø16

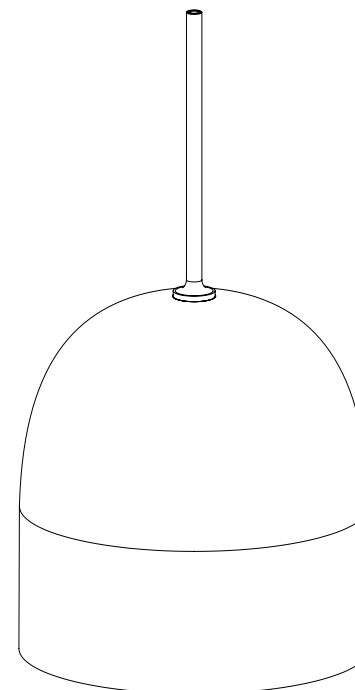

CONTENTS

Howard Pendant - Ø16

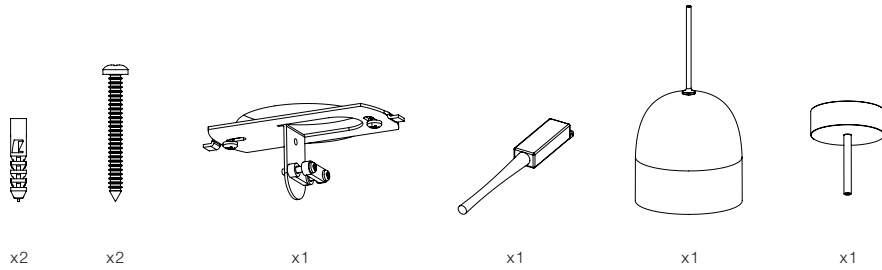


1.

Loosen and remove the mounting ring and silicone rings from the lamp base.




2.

 Install the lamp shade and screw in the mounting ring, leaving the silicone rings on either side of the shade.



3.

Attach the ceiling bracket to the ceiling where the mains voltage exits.

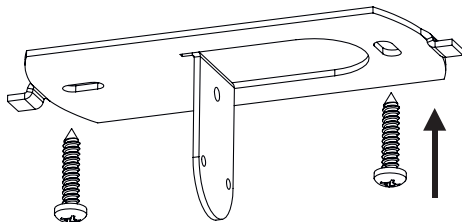


4.

4.1 Open connection box by pushing the pins while pulling the lid.



 4.2 Connect mains wire and lamp wire in the screw terminal.




4.2 Close connection box and place inside the canopy.



5.

Place canopy on ceiling bracket and twist approx 5-20 dg.

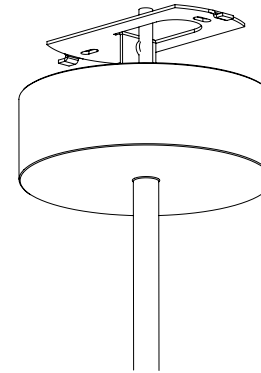

6.

Insert the light bulb.

